



## **coccolle 322061560 Melora 3 In 1 Convertible Travel System Instruction Manual**

[Home](#) » [coccolle](#) » coccolle 322061560 Melora 3 In 1 Convertible Travel System Instruction Manual 

# coccolle<sup>®</sup>

# Melora



## Contents

- 1 322061560 Melora 3 In 1 Convertible Travel System
- 2 Convertible travel system 3in1 Coccolle Melora
- 3 Safety warnings!
- 4 Warranty conditions
- 5 Spare parts list
- 6 Care and maintenance
- 7 Essential parts:
- 8 Assembly steps
- 9 Documents / Resources
- 10 Related Posts

## 322061560 Melora 3 In 1 Convertible Travel System

The images shown in this instructions manual have illustrative purpose. The product purchased by you may look different. / The proper functioning of this product is strictly dependent on its well maintenance.
















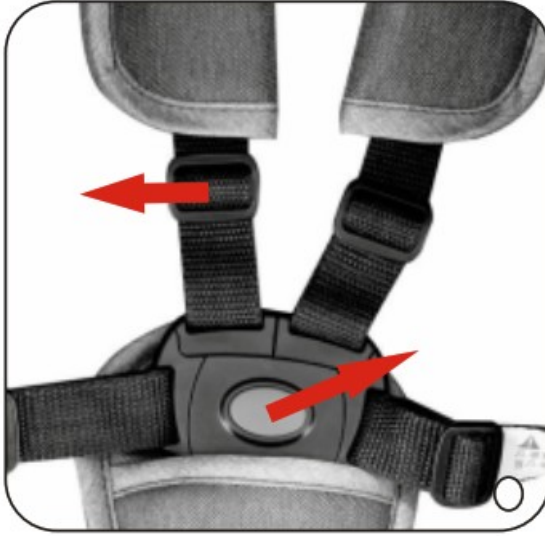





## Convertible travel system 3in1 Coccolle Melora

Suitable age: 0-36 months

Maximum load weight: 15 kg

Please read this instruction manual and keep it for future reference. Not following the instructions in this manual might compromise the safety of your child.

It's forbidden to leave the child unattended and use the product without adult supervision.

The product is not suitable for jogging or ice skating.

### Safety warnings!

1. Before using this product, please carefully read the instructions.
2. The stroller must be assembled by adults! Please keep your baby and/or child away during the assembly, folding, unfolding of the product.
3. Make sure that each spare part is correctly installed before usage.
4. Please be careful while folding and unfolding the stroller, avoid pinching your fingers!
5. Ensure that all locking devices are in place and locked before usage.
6. It's strictly forbidden to use the stroller as a toy and to allow an older child to push the stroller.
7. Please always use the brake while in parking/stationing position and while you put and remove the child from the product.
8. Always use the stroller's restraining system to avoid accidental falling. Never leave your child unattended, including in the moments when they have the restraining system properly fitted.
9. Pay attention to your baby while making adjustments on the stroller.
10. Activate the brake whenever you're not pushing the stroller.
11. The accessories and spare parts of this stroller should not be used on other strollers as neither should you make use of other product's accessories and parts on this product.
12. This baby stroller is designed for babies aged 0-36 months old with a maximum weight of 15 kg.
13. The maximum thickness of the newborn mattress: 2 cm.
14. Any load attached to the handle or the backrest of the stroller will affect the stability of the product. Maximum bearing capacity of the footrest: 5 kg.  
Maximum bearing capacity of the shopping basket: 2 kg. Maximum bearing capacity of the cupholder: 0.5 kg.  
Exceeding the suggested loads may affect the stability of the product and we do not recommend overbearing it.

15. The stroller can only be used by one child at a time at a maximum overall weight of 15 kg.
16. Always pay attention of the traffic when using the stroller on public roads.
17. Please pick up the baby from the convertible seat unit before climbing stairs or boarding in an elevator.
18. Keep away from fire!

## **Warranty conditions**

1. The warranty does not cover:

Damage occurred for reasons attributable to the user.

Damage occurred as a result of failure to use the product according to recommendations, warnings and restrictions found in the user manual and on product elements.

Consumables subject to natural wear and tear during normal usage such as: tyres, inner tubes, tread, materials used on handles, structure and colour of fabrics and materials subject to friction, sleeves in wheels, axels, prints.

Damage occurred as a result of failure to observe maintenance guidelines such as: corrosion, changed upholstery or plastic elements colour as a result of prolonged exposure to sunlight, damage to plastic elements of upholstery as a result of prolonged exposure to sunlight or excessive temperatures, excessive play, squeaking / creaking noises, damage to mechanism due to over-load.

Damage occurred due to repairs being carried out by unauthorised personnel.

Single wheels being pushed into a vertical position as a result of loading (this is normal).

Damage and soiling occurred due to the product being incorrectly packaged for shipping (courier online purchases).

2. The repair method is determined by the manufacturer/warranty service provider.
3. The product subject to a complaint should be provided clean.
4. The consumer goods warranty does not exclude or suspend the purchaser's rights stemming from goods noncompliance with the agreement.

## **Spare parts list**

1. Canopy
2. Bumper bar
3. Safety belt (restraining system)
4. Front wheel
5. Shopping basket
6. Rear wheel
7. Brake
8. Folding activator
9. Pushbar

## **Care and maintenance**

1. For your child's safety please check the product regularly.
2. Check for worn parts regularly and replace them if necessary.
3. When replacing worn parts follow the instructions or leave the change in the care of an authorized service unit.

4. Avoid placing objects on top of the stroller.
5. Do not use non-genuine parts and accessories.
6. It's forbidden to machine wash the canopy, only hand wash allowed!
7. Dry the products' textile parts in shade, naturally, avoiding sun exposure.

Exposing the product in direct sunlight can cause discoloration and loosening of the fabric.


### **Essential parts:**

- Before installation check that all the parts are included in the package and complete. For any missing parts, contact our customer care service. To guarantee a longer lifetime for the product, please use it correctly under the current instructions and inspect its integrity regularly.

A- Frame; B- Multifunctional seat unit; C- Front wheels and bumper bar; D- Rear wheels and canopy;

### **Assembly steps**

1. Grab the handle and pull it upwards to unfold the frame. The stroller is fully unfolded when you hear the sound "click".
2. Installation and removal of rear wheels: lift up the rear part of the frame, pull downward the metal plate as show in the illustration, then fully insert in the mounting hole on the side of the frame. Check whether the rear wheels are properly mounted before usage. In order to remove the rear wheels, please pull the metal plate downward.
3. Installation of the front wheels: lift up the front part of the frame and insert the front wheels in the mounting hole beneath the frame. Please check whether the wheels are properly fitted before usage. In order to remove the front wheels, please pull the metal plate downward.
4. Front wheels swivel function: press down the button on the front wheel to deactivate the pivot function. Lift it up if you want the front wheels to swivel.
5. Installation of the canopy: insert the canopy in the slots from the convertible seat unit's frame and using the zipper, zip it on.
6. Installation of the bumper bar: insert both ends of the bumper bar in the sleeping basket until hearing the "click" sound.
7. Installation of the convertible seat unit: insert both ends of the convertible unit in the frame until you hear the "click" sound. Press the rectangle buttons on both lateral sides of the unit and lift it up from the frame in order to remove it from the frame.
8. Adjustment of the convertible seat unit's recline angle: press the round buttons on both sides of the frame to adjust the seat unit in different positions. In order to convert the multifunctional unit from carrycot to sport seat buckle up the belts at the back side of the product.
9. Using the brake: step on the brake in order to activate it. Lift the break bar upward in order to release the brake.
10. Canopy adjustment: the canopy can be adjusted in 3 different positions.  
Follow the images.
11. Seat belt usage and adjustment: for the safety of your baby, this product has been equipped with a 5-point seat belt. The belt's length can be adjusted according to the height of the child. Press the central, red button to release the safety belt.
12. Folding: press down, at the same time, the two buttons on both sides of the frame and lift it to hold first. Pull up the folding articulation on both sides as illustrated in the image and push the handle downward. Lock the frame.

|  |   |
|--|---|
| <p><b>coccolle</b><br/><b>Melora</b></p> <p>01<br/>02<br/>03<br/>04<br/>05<br/>06<br/>07<br/>08<br/>09<br/>10<br/>11<br/>12<br/>13<br/>14<br/>15<br/>16<br/>17<br/>18<br/>19<br/>20<br/>21<br/>22<br/>23<br/>24<br/>25<br/>26<br/>27<br/>28<br/>29<br/>30<br/>31<br/>32<br/>33<br/>34<br/>35<br/>36<br/>37<br/>38<br/>39<br/>40<br/>41<br/>42<br/>43<br/>44<br/>45<br/>46<br/>47<br/>48<br/>49<br/>50<br/>51<br/>52<br/>53<br/>54<br/>55<br/>56<br/>57<br/>58<br/>59<br/>60<br/>61<br/>62<br/>63<br/>64<br/>65<br/>66<br/>67<br/>68<br/>69<br/>70<br/>71<br/>72<br/>73<br/>74<br/>75<br/>76<br/>77<br/>78<br/>79<br/>80<br/>81<br/>82<br/>83<br/>84<br/>85<br/>86<br/>87<br/>88<br/>89<br/>90<br/>91<br/>92<br/>93<br/>94<br/>95<br/>96<br/>97<br/>98<br/>99<br/>100</p>  <p><small>© 2015 Coccolle s.p.a. - Via S. Maria Maddalena, 10 - 37060 San Giovanni Lupatoto (VI) - Italy<br/>Tutti i diritti sono riservati. È vietata espressamente la ristampa o l'uso non autorizzato senza permesso scritto dalla Coccolle s.p.a.</small></p> | <p><a href="#">coccolle 322061560 Melora 3 In 1 Convertible Travel System</a> [pdf] Instruction Manual<br/>5265322061560, Melora, 3 In 1 Convertible Travel System, Melora 3 In 1 Convertible Travel System, 322061560 Melora 3 In 1 Convertible Travel System, Convertible Travel System</p> |
|--|---|